 




SL HEXALED S RGB

user manual

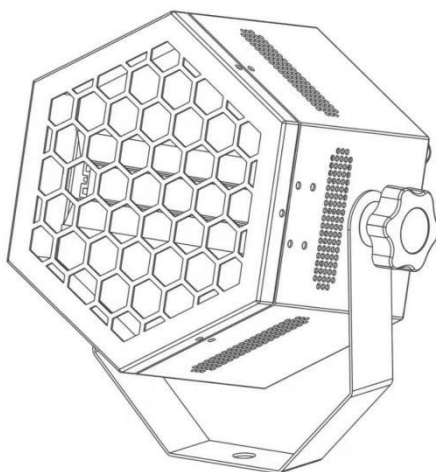

Contents

1. Safety Instruction	3
2. Function Menu	4
3. Function Operation	5
4. Channel Function	7
5. Product Dimension Drawing	9
6. Technical Parameter	9

 
Safety Notes

Note : To ensure reasonable consistency of operation, please read this instruction carefully. Any damages caused by the non-observance of this manual or any unauthorized modification to this product are not be subject to warranty .

1. This product belongs to high temperature products. Do not touch the lamp body when working, carefully scalds!
2. Maintain a 50CM space at the back of the lamp body for dissipate heat.
3. When installing/replacing the lamp tube, turn off the lamp power!
4. This lamp is used for indoor lighting, not waterproof ! When lamp works, lamp tube at high temperature.
5. Make sure the voltage and frequency of power supply match the power require of this devise.
6. Please do not operate the equipment in the condition of wire damage or wear.
7. Do not remove any part of the equipment during the use of lamps.
8. Any unauthorized modification to this product are not be subject to warranty .


Function Menu

Menu map

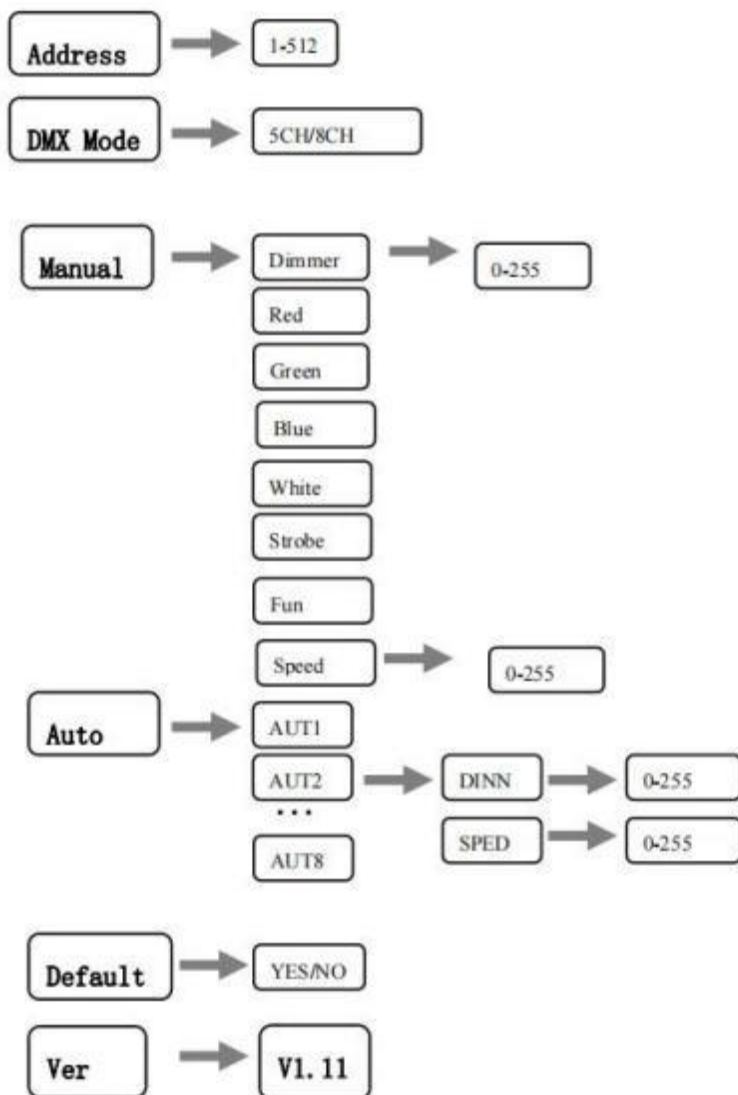

Function Operation

 Keys diagram

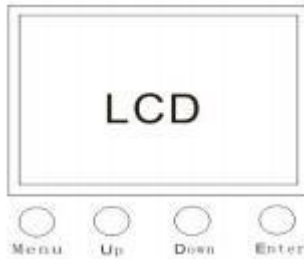

2.1 built-in program Automatic function

1. Select the working mode menu.
2. Select automatic mode.
3. Choose one of eight programs.
4. Setting program speed.

2.2 manual mode function

The manual mode function is consistent with the 8 CH channel but in manual mode DMX address is not working in that condition. The operator only needs to operate according to the 8CH channel.

2.3 Sound control function

1. Select the working mode menu.
2. Select automatic mode. Because sound control is based on the automatic program, so you need to choose the automatic program before you turn on the sound control .
3. Choose one of two programs .
4. Select the working mode menu.
5. Select sound control mode.
6. Set the sound control sensitivity. From 0 to 255 sound control will more and more sensitive

Channel Function

5CH DMX general function

1. Select the working mode menu.
2. Select DMX mode.
3. Set to 5 channel mode.
4. Exit the working mode menu, select the DMX menu, and set the DMX menu address. The DMX address can be set to 001.

CH	Value	function
1	0-255	Dimmer 0- 100%
2	0-255	Red 0- 100%
3	0-255	Green 0- 100%
4	0-255	Blue 0- 100%
5	0-255	White 0- 100%

8CH DMX general function


1. Select the working mode menu.
2. Select DMX mode.
3. Set to 8 channel mode.
4. Exit the working mode menu, select the DMX menu, and set the DMX menu address.

The DMX address can be set to 001.

CH	from	to	function
1	0	255	Dimmer 0- 100%
2	0	255	Red 0- 100%
3	0	255	Green 0- 100%
4	0	255	Blue 0- 100%
5	0	255	White 0- 100%
6	0	9	Open
	10	99	Strobe in the line (from slow to fast)
	100	109	Open
	110	179	Strobe pulse (from slow to fast)
	180	189	Open
	190	255	Strobe Random (from slow to fast)
7	0	7	No function
	8	125	Static Color
	126	229	Dynamic Effect
	230	255	No Function
8	0	255	Auto Speed 0- 100%

Product Dimension Drawing

 As below :

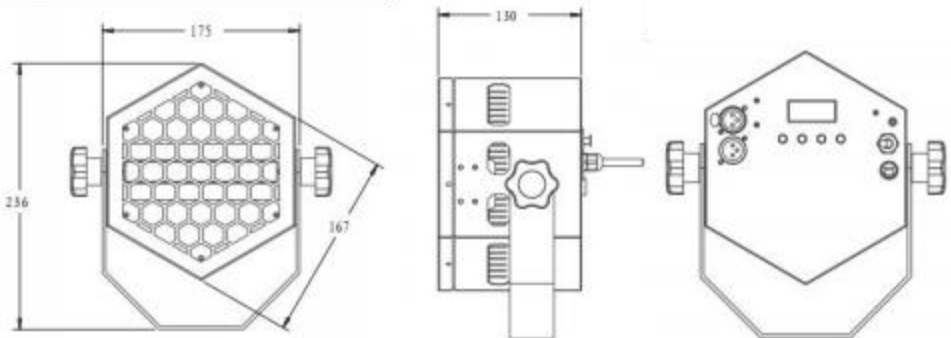

Technical Parameter Diagram

Technical Parameter Diagram :

Item	Technical Parameter
Work voltage	110 ~ 240V50/60HZ
Power consumption	80W
Light source	1×60W +24× RGB
DMX channel	5CH /8CH
Control Mode	Auto-run , Sound control ,DMX control
Color temperature	2200K+RGB
Dimension	236×175×130MM
Wight	2.7Kg
Packing	Carton/6 pcs